Check-List

To mount your flat panel monitor or any parts at an ergonomically correct position, start at step 1 and continue as directed.

Part Check-List

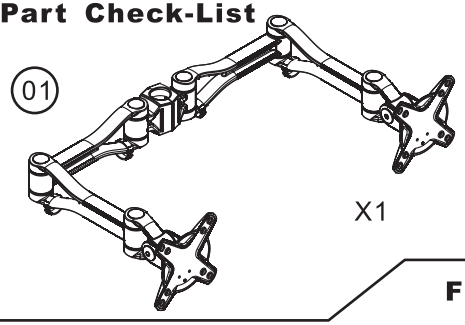

Fitting / Tools Check-List

02	(5mm)	X1
03		X8
04		X8

Part Check-List

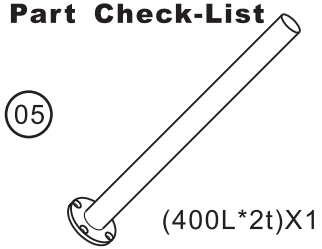

Fitting / Tools Check-List

06		X1	09		X4
07		X1	10	(4mm)	X1
08		X1	11		X2

12		X1
13		X1
14	(5mm)	X1
15	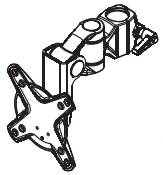	X1
16	 (5mm)	X1
17		X4
18		X1
19		X4

Step 1

Adhere the pad to the clamp base. Desk thickness from 15mm~70mm. Then fix the clamp on the desk. If desk thinkness over 70mm,please adjust screws with 5mm Allen Key. (as figure a.)

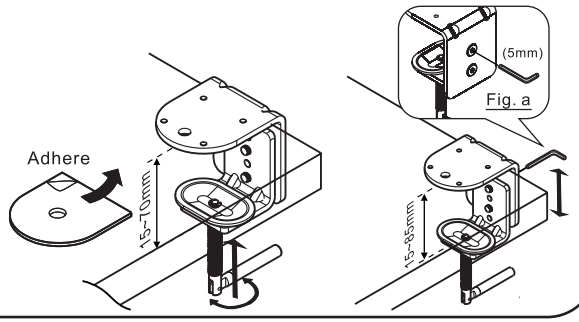

Assembly Guide

Step 2

Use 4mm Allen key to secure the pole and clamp with 4 screws. Then put the plastic cover (08) through the pole and check the pin position with the screw together.

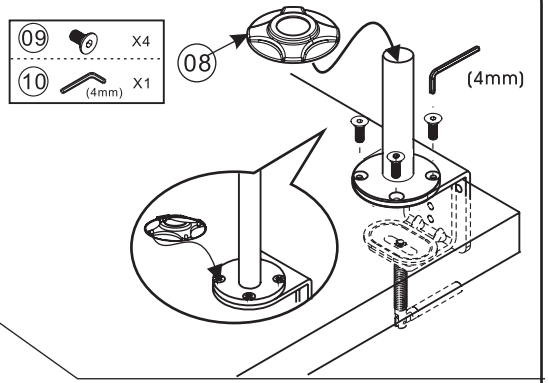

Step 3

Loosen two screws slightly. with 4mm Allen key Put the arm into the post and adjust it to the suitable position. Tighten it up. Finally, put in the plug.

*Insert the arm into the pole. Adjust the level of high to the most comfortable view.
*Use the lever tighten the arm(as figure A.) or secure it with one screw(as figure B.) and then put in the plug.

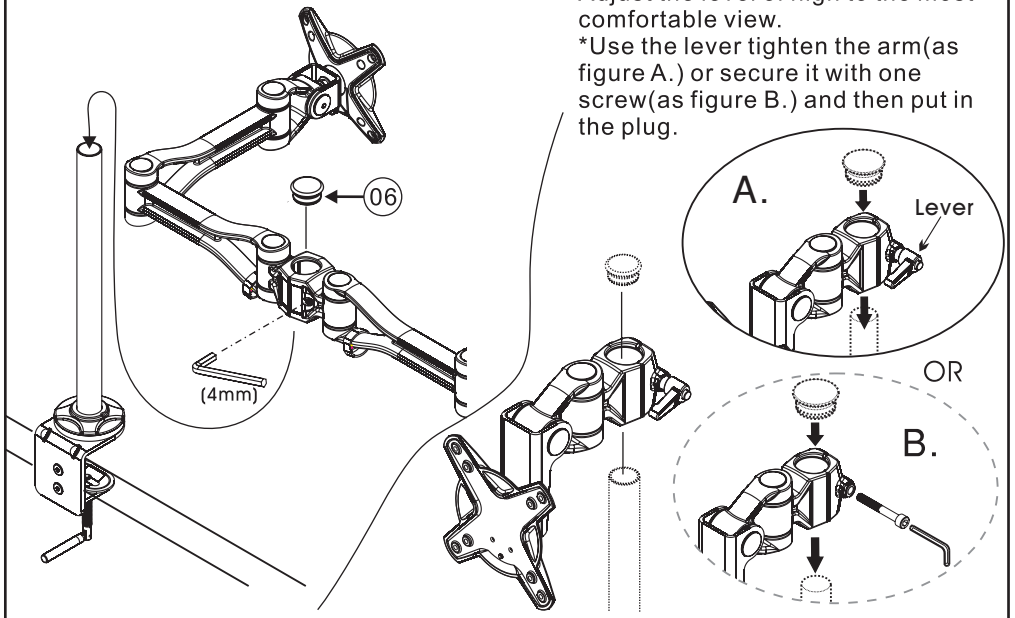

Step 4

(1)Please loosen the knob at first,and then apart the fixing lump.

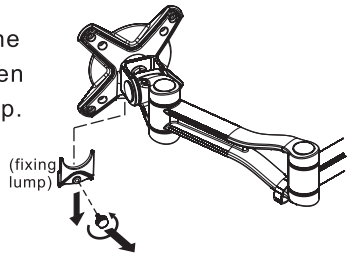

(2) Then,take VESA up .

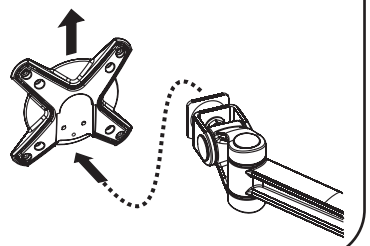

Assembly Guide

Step 5

Place LCD with facing downward on flat surface. Place VESA on the LCD back as figure and align to the screw holes. Secure them together with four screws .And then tighten them up with screwdriver(not provided).

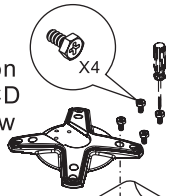

•These screws (M4/15L) are just for special monitor when the original screws are too short to fasten. X4

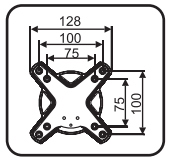

75mmx75mm
100mmx100mm
VESA interface.

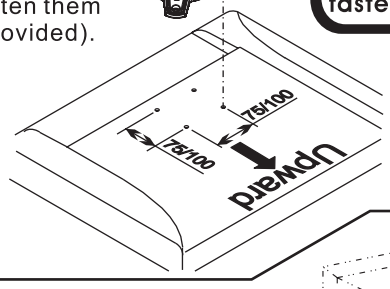

Step 6

Insert the VESA(with LCD display on already)into the arm and press it down. Then secure fixing lump on VESA with knob.(as figure down step 1. 2. 3)

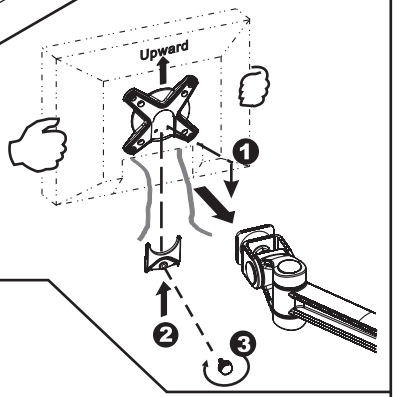

Step 7

If the arm is loose, please use the Allen Key(5mm) to tighten the screw.

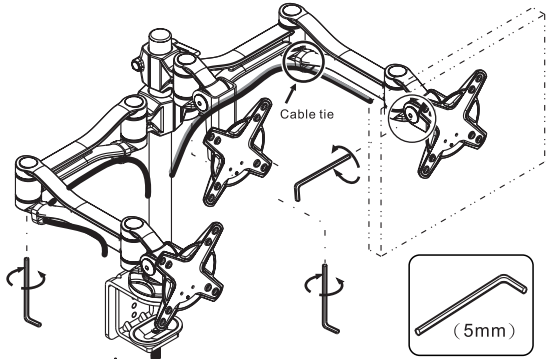

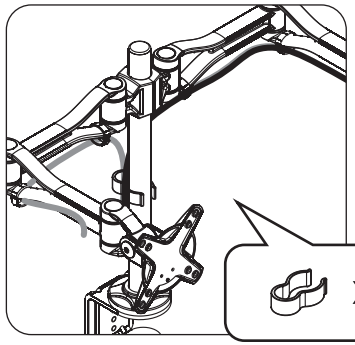

Cautions:

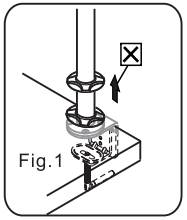

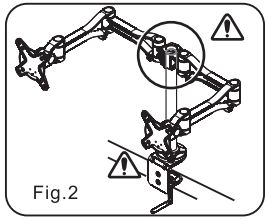

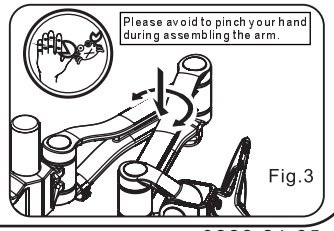

2009.06.25

NewStar user's Manual

LCD Monitor Arm FPMA-D1030D3

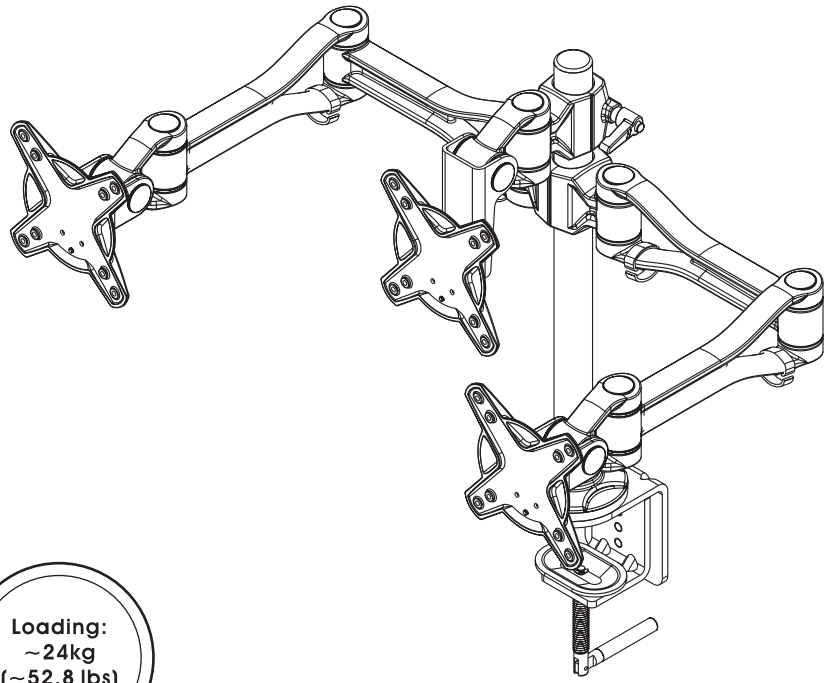

Loading:
~24kg
(~52.8 lbs)

NEWSTAR
computerproducts

www.NewStar.nl
Phone: + 31 (0) 23 547 88 88